



Bonnet Carpet Cleaning Guide

Welcome to the Bonnet Cleaning Training Guide! This guide is designed to provide you with the essential knowledge and step-by-step instructions needed to effectively clean and maintain the bonnet. Proper bonnet care ensures not only the cleanliness and appearance of the equipment but also extends its lifespan and functionality.

Whether you're new to this process or seeking to refine your technique, this guide will walk you through the best practices, tools, and safety measures required for a thorough and efficient cleaning process. Let's get started!

OVERVIEW OF STEPS

- Gather Supplies & PPE
- Vacuum & Spot Treatment
- Place "Wet Floor" sign
- Procedures
- Machine Set-Up & Safety
- Final Steps

REQUIRED PRODUCTS

- Spartan Pre-Treat Product
- Spartan Extraction Product
- Vacuum Cleaner
- Bonnet Pad
- Sprayers
- 175 RPM Floor Machine
- Protection Equipment (PPE)
- "Wet Floor" Signs


1 Gather Supplies & Personal Protective Equipment



Gather all necessary cleaning supplies before beginning the bonnet cleaning process. These may include Spartan pre-treatment and extraction products, vacuum cleaner, bonnet pad, sprayers, 175 RPM floor machine, "Wet Floor" signs, and clean water. Ensure that all equipment is in working condition before use.

When using cleaning chemicals, always apply personal protective equipment (PPE) such as gloves, safety glasses, and any other gear specified in the Safety Data Sheets (SDS) for the products you are using. This ensures your safety during the cleaning process.

2 Follow the Vacuum & Spot Treatment Procedures

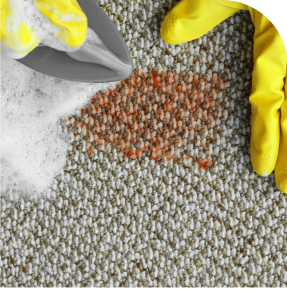

Fill your sprayers with the correct dilution of Spartan pre-treatment and extraction products, following the manufacturer's instructions for the proper ratio.

Recommended Dilutions:

- Light Cleaning Tasks: 1:8
- Normal Soil Conditions: 1:6
- Heavy Cleaning/Renovation: 1:3

3 Remove Any Portable Furniture



Clear the area by removing any portable furniture or objects to ensure access to the entire cleaning area.

4 Place "Wet Floor" Sign



Position a "Wet Floor" sign in the area to notify others that the floor is being cleaned and is wet, preventing accidents.

5 Spray a 10ft-by-10ft Area & Allow It to Set for 5-10 Mins



Spray a 10ft-by-10ft section of the carpet with the pre-treatment solution. Let it set for 5-10 minutes to allow the solution to penetrate and loosen dirt.

Recommended Dilutions:

- Light Cleaning Tasks: 1:8
- Normal Soil Conditions: 1:6
- Heavy Cleaning/Renovation: 1:3

6 Spray the Bonnet & Place It on the Machine



Spray the bonnet pad with the extraction product and attach it to the machine. Begin treating the adjoining 10ft by 10ft section, overlapping slightly with the previously treated area.

7 Adjust the Handle on the 175 RPM Machine



Adjust the handle of the 175 RPM floor machine so it aligns comfortably with your hip, ensuring proper posture and control during operation.

8 Loop the Cord Through Your Belt or Attach It to a Belt Hook




Secure the power cord by looping it through your belt or attaching it to a belt hook, keeping it out of the way while cleaning.

9 Run the Bonnet Back and Forth Over Area



Move the machine back and forth over the first 10ft by 10ft area, ensuring each pass overlaps slightly to ensure thorough cleaning. Repeat this process for the entire section.

10 Turn Bonnet as Necessary

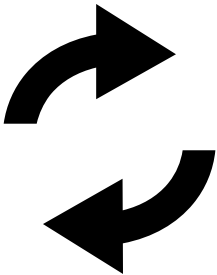

Rotate the bonnet pad as needed to ensure even coverage and optimal cleaning results.

11 Final Steps



Clean and Return Equipment & Remove "Wet Floor" Sign When Dry
Once the carpet is dry, clean all equipment and remove the "Wet Floor" sign. Ensure that all cleaning tools are properly stored and ready for the next use.

Replace Any Furniture Moved to Its Original Position

Once the area is dry, return any furniture or items that were moved back to their original locations.